
# Handling your Yealink SIP-T57W Desktop Phones

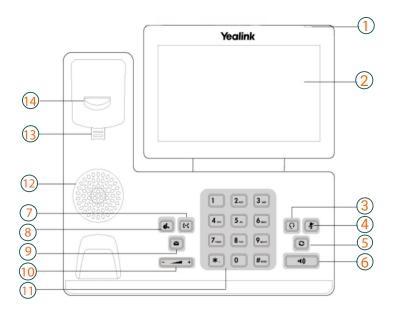

# Legend



- 1: Power LED indicator
- 2: Touch screen
- 3: Headset key
- 4: Mute key
- 5: Redial key
- 6 : Speakerphone key
- 7: Transfer key
- 8: Hold key
- 9: Message key
- 10: Volume key
- 11: Keypad
- 12: Speaker
- 13: Reversible Tab
- **14**: Hook

## **T57W Icons in the Status Bar**

	Speakerphone (hands-free) mode
$\leq$	Unread email
<b>a</b>	Voice Mail
	Do Not Disturb (DND)
Ø	Mute
3	Phone Lock
5	Call Forward
0	Handset mode
<b>▼</b>	Missed calls
$\leq \times$	Ringer volume is 0
<u>+</u>	Downloading file
*	Bluetooth headset is paired and connected

#### **Action keys**


- 1 : FWD = forward
- 2 : DND = do not disturb
- 3 : Phonebook
- 4 : Menu

#### **Action keys incoming call**

- 1 : Answer
- 2 : FWD = forward
- 3 : Silence
- 4 : Reject

#### Action keys during a call

- 1 : Transfer
- 2 : Hold
- 3 : Conference
- 4 : End call

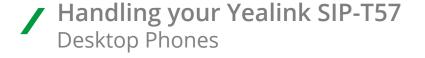



# Placing a call

#### To place a call using the handset

- Pick up the handset.
- Enter the number, and tap Send.

#### To place a call using the hands-free (speakerphone) mode:

- With the headset connected, press ① to activate the headset mode.
- Enter the number, and tap **Send**.

During a call, you can alternate between the headset, hands-free speakerphone and handset modes by pressing the HEADSET key, the Speakerphone key or by picking up the handset.

# **Answering a Call**

Using the handset: Pick up the handset. Using the speakerphone: Press

Using the headset: Press

# Redialing a number

- Press to enter the Placed Calls list, and then tap the desired entry.
- Press twice when the phone is idle to dial out the last dialed number.

### Call Mute and Un-Mute

- Press 🎍 to mute the microphone during a call.
- Press 🌡 again to un-mute the call.

# **Call Transfer**

#### **Blind Transfer**

- 1. Press or tap the Transfer soft key during a call. The call is placed on hold.
- 2. Enter the number you want to transfer to.
- 3. Press 🕅

#### **Semi-Attended Transfer**

- 1. Press or tap the Transfer soft key during a call. The call is placed on hold.
- 2. Enter the number you want to transfer to and then press
- 3. Press or tap the **Transfer** soft key when you hear the ring-back tone.

#### Attended Transfer

- 1. Press or tap the **Transfer** soft key during a call. The call is placed on hold.
- 2. Enter the number you want to transfer to, and then press
- 3. Press or tap the **Transfer** soft key when the second party answers.

#### **Call Conference**

- 1. Tap the **Conference** soft key during an active call. The call is placed on hold.
- 2. Enter the number of the second party, and then press # or tap Conference.
- 3. Tap the **Conference** soft key again when the second party answers. All parties are now joined in the conference.
- 4. Tap the End Call soft key to disconnect all parties.